

GS-RAM IIITM

User's Manual

AE APPLIED ENGINEERING[®]

A DIVISION OF AE RESEARCH CORPORATION

v1.0

Applied Engineering

Telephone Numbers

Technical Support

Voice Line - 1-900-369-2323

Your call to Technical Support will be billed to your phone.

9 AM to 5 PM (CST), Monday - Friday

Bulletin Board System - (214) 241-6677

300/1200/2400 baud

8 Bit, No Parity, Full Duplex, MNP-5

24 Hours, 7 Days a Week

Do not return any
product for service without a
Return Material Authorization (RMA) number.
An RMA number can be obtained by calling
Technical Support.

Sales

(214) 241-6060

9 AM to 6 PM (CST), Monday - Friday

INTRODUCTION

About The GS-RAM III Card

Memory Expansion--The GS-RAM III allows you to increase the Random Access Memory (RAM) capacity of your Apple IIGS. RAM is the memory that can be both read from and written to--the addressable memory. Many programs automatically look for and use available RAM to give them more room to operate (desktop space). Many programs load themselves into the available RAM at startup. This greatly increases their performance because it reduces or eliminates the need to access the relatively slow mechanical floppy drives. GS-RAM III lets you increase the available system RAM by a maximum of 4 Megabytes (Mb) on the board itself, in increments of 1 Megabyte. This means that IIGS ROM 03 machines (with 1 Megabyte installed on the motherboard) can have a total of 5 Megabytes while the earlier IIGS's can have a total of 4.5 Megabytes.

6Mb--When you want to expand beyond 4Mb, you can attach the 2Mb "Piggyback" Expander. It connects directly to the GS-RAM III and adds its 2Mb to the 4Mb on the GS-RAM III for 6Mb's of memory.

RAM Disks--Use some of the GS-RAM memory to set up a RAM Disk. A RAM disk acts as an internal, electronic hard disk giving you super-fast access to applications that are copied to it. Loading from and storing to a RAM disk can be as much as 20 times faster than a conventional disk drive because it eliminates the mechanical activity required by a conventional drive.

DMA Support--The GS-RAM III is fully DMA (Direct Memory Access) compatible. Any device that requires DMA-style memory can use all the available memory on GS-RAM III.

AW 3 Expansion Software--With your GS-RAM, you've also received Applied Engineering's AW 3 Expander software. This program will greatly enhance the popular AppleWorks integrated software package adding such features as more Word Processor lines and Data Base records, an expanded clipboard, Multiple Disk Save and more.

Also included on the AW 3 Expander is a graphic test for your GS-RAM III that will tell you which, if any, chips are bad and will also check for the proper type of chips. Refer to the AW 3 Expander User's Manual for complete information about the disk.

About This Manual

Below is a brief description of what is covered in each chapter of this manual.

Chapter 1 will take you quickly through the installation and testing of your GS-RAM III card.

Chapter 2 tells you how to use some of the expanded memory as a RAM disk. This is a great way to increase the access speed to different applications.

Chapter 3, as mentioned above, helps you to decide what chips you will need to expand the memory of your GS-RAM III card. It also explains how to install the chips yourself as well as how to return the card to Applied Engineering for a memory upgrade with no additional charge for the installation and testing.

Appendices provide you with instructions on what to do when you encounter a problem that is not covered in the manual.

We have tried to make this manual as informative, understandable, and error-free as possible. If you have any comments or suggestions regarding this manual or any other AE manual, we would be glad to hear from you. Please address any comments or suggestions to:

Applied Engineering
P.O. Box 5100
Carrollton, Texas 75011

Attention: Manager, Technical Publications

Now, turn the page and let the memory begin!

Limited Warranty & Disclaimer

Applied Engineering warrants the GS-RAM III card and memory chips installed by or purchased from Applied Engineering against defects in material and workmanship for a period of 1 year from the date of original retail purchase. Applied Engineering also warrants that, under normal use, the magnetic media on which the included AE software is stored is free from defects in materials and workmanship for a period of 30 days from the date of original purchase. Any misuse, abuse, or non-AE authorized alteration, modification and/or repair to the Applied Engineering product will void the warranty. This warranty will also be void if you use the AE product for any other purpose than its intended use. If you discover a defect, Applied Engineering will, at its option, repair or replace only the Applied Engineering product, provided you return the product during the warranty period, transportation prepaid, to Applied Engineering.

This warranty applies to the original retail purchaser only. Therefore, please include a copy of the original invoice or a small service charge may be applied. If the product is to be sent to Applied Engineering by mail, the purchaser will insure the package or assume full responsibility for loss or damage during shipping. Prior to returning the product for warranty consideration, call Applied Engineering Technical Support for a Return Material Authorization (RMA) number and shipping instructions.

Even though Applied Engineering has tested the software and reviewed the documentation, Applied Engineering makes no warranty or representation, either expressed or implied, with respect to the manual or the software; their quality, performance, merchantability, or fitness for a particular purpose. As a result, the software and manual are sold "as is," and you, the purchaser, are assuming the entire risk as to their quality and performance.

In no event will Applied Engineering be liable for loss or damages of any kind caused either directly or indirectly by the use or possession of its products, even if advised of the possibility of such damages. The Applied Engineering Warranty is for the Applied Engineering Product itself. In particular, Applied Engineering shall have no liability for any other equipment used in conjunction with Applied Engineering products nor for programs or data stored in or used with Applied Engineering products, including the costs of recovering such equipment, programs, or data.

The warranty and remedies set forth above are exclusive and in lieu of all others, oral or written, express or implied. No Applied Engineering dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

This manual and the software (computer programs) described herein are copyrighted by Applied Engineering with all rights reserved. Under the copyright laws, this manual or the programs may not be copied, in whole or in part, without the written consent of Applied Engineering, except in the normal use of the software or to make an archival copy. This exception does not allow copies to be made for others, whether or not sold, but all of the materials purchased (with all archive copies) may be sold, loaned, or given to another person. Under the law, copying includes translating into another language or format. You may use this software on any computer owned by you but extra copies cannot be made for this purpose.

Applied Engineering cannot guarantee that you will receive notice of revisions to the software, documentation, or products described in this manual. Be sure to check with your dealer or Applied Engineering for information on possible updates. However, Applied Engineering reserves the right to make any improvements to Applied Engineering products without any responsibility toward upgrading previously released products.

Apple is a registered trademark of Apple Computer, Inc.
AppleWorks, DOS 3.3, and ProDOS are trademarks of Apple Computer, Inc.
Applied Engineering is a registered trademark of Applied Engineering.
GS-RAM, RamKeeper, AW 3 Expander, Super Desktop Expander, and CP/AM are trademarks of Applied Engineering.

©Copyright 1991, Applied Engineering

12490

050891

Applied Engineering
P.O. Box 5100
Carrollton, Texas 75011

Sales: (214) 241-6060 • 9 AM - 11 PM (CST) 7 days

Technical Support: 1-900-369-2323 • 9 AM - 12:30 & 1:35 - 5 PM (CST) Monday - Friday
(Your call to Technical Support will be billed to your phone number.)

The Technical Support telephone lines cannot be accessed through the Sales department.
Bulletin Board System: (214) 241-6677 • 300/1200/2400, 8 Bits, No Parity, Full Duplex, MNP-5
24 hours, 7 days a week

Table Of Contents

INTRODUCTION - ABOUT THE GS-RAM III	I
<hr/>	
CHAPTER ONE - GETTING STARTED	
Installation	1
<hr/>	
CHAPTER TWO - THE GS-RAM III AS A RAM DISK	5
Setting Up a RAM Disk	5
Addressing the GS-RAM III Disk	6
Using the GS-RAM III RAM Disk	7
FORMATTING	7
COPYING	8
SAVING	8
<hr/>	
CHAPTER THREE - ADDING MORE MEMORY	9
Memory Increments	9
Where to Get Chips	9
Chip Choices	9
Installing the Chips	9
<hr/>	
GETTING HELP	12
Returning a Product	13

CHAPTER ONE


Getting Started

- ❖ *Note:* If you're using GS-RAM III with the RamKeeper, plug it into the front side of the RamKeeper only.

This chapter tells you how to install and test the GS-RAM III memory expansion card. Before you install your memory-expansion card, please be sure you are familiar with *Setting Up Your Apple IIGS* and the *Apple IIGS Owner's Guide*. You'll need to be particularly familiar with the Control Panel functions as this manual makes frequent reference to the Control Panel menu.

Installation

- 1) **Turn off the computer.**
Leave the computer plugged in but flip the power switch to the OFF position.
- 2) **Remove the Apple IIGS cover.**
Locate the two latches on either side of the backplate. Push in on the latches while pulling up and back on the lid.
- 3) **Touch the power supply case.**
The case is shown in the illustration below. This will discharge any static electricity that may be on your body. Do not skip this step. Static electricity can ruin chips on the board and in the computer.
- 4) **Remove the memory-expansion card from its anti-static bag.**
Hold the card by the edges, like a photograph. Do not touch the gold fingers of the card.
- 5) **Check the position of the switches.**
The switches are located toward the top left edge of the card. The position of the switches lets the computer know how much memory is on the card. (Refer to following illustration.)

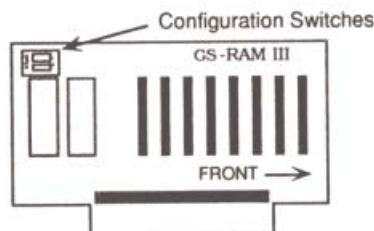

Location of the Switches

Your board may use either Flip Switches or Rocker Switches. Refer to the drawing below for proper settings.

Memory	Switch 1	Switch 2
1 Megabyte	Off	Off
2 Megabytes	On	Off
3 Megabytes	Off	On
4 Megabytes	On	On

Flip Switches



1 Meg 2 Meg 3 Meg 4 Meg



1 Meg 2 Meg 3 Meg 4 Meg

Rocker Switches

Check the Switches

6) **Position the memory expansion card over the Memory Expansion Slot.**

The Memory expansion slot is located in the front right corner of the computer. Hold the card so that the long end of the card is toward the rear of the computer.

7) **Insert the card.**

❖ **Warning:** It is possible to install the card into the slot backwards. Make sure that the end marked "FRONT" on the card is toward the front of the computer.

Insert the gold edge-connector into the Memory Expansion Slot until it is completely seated. **The chips will be facing the power supply on the left side of the computer.** You can wiggle the card gently, back to front, to ensure a firm connection.

8) **Replace the Apple IIgs cover.**

Slide the front of the lid in first, then press on the back edge until it snaps into place.

9) **Check the RAM Disk setting to verify correct installation.**

You can verify that the computer recognizes the additional memory by checking the RAM Disk option in the Control Panel menu. Those using Finder v1.3 can select the Control Panel option from the Apple menu and then select the RAM icon. If you're using an earlier version of GS/OS or ProDOS 8, access the RAM option by doing the following:

- Turn on the computer then access the Classic Desk Accessories menu by holding down the Open-Apple and Control keys while pressing ESC.
- Use the up and down arrow keys to select the Control Panel menu and press "return".
- Select the RAM Disk option and press "return".
- The number next to the Largest Selectable listing tells you the amount of memory that the system now has available.

10) **Make a copy of the AW 3 Expander disk.**

It is very important to make backup copies of your master disks when possible. The AW 3 Expander disk is not copy protected. You can copy it using the IIgs's Finder™. Simply drag the AW 3 icon to the icon of the destination disk.

If you don't use the Finder, you can use the "Copy Files" option of your GS utility disk or the "Filer" program included on the AW 3 Expander disk.

- ❖ *Note:* Instructions for copying with Filer are included in the Appendix of the AW 3 Expander manual. Instructions for copying with System Utilities are included in, *Apple II GS System Disk User's Guide*.

After you copy the disk, store the master in a safe place.

11) Test the card.

Boot your COPY of the AW 3 Expander disk and select the GS-RAM III Test program from the main menu.

- ❖ **WARNING:** The GS-RAM III test program will erase any files or programs stored in RAM.



12) Installation is complete!

CHAPTER TWO

The GS-RAM III as a RAM Disk

Many of the newer application programs take advantage of the extended memory automatically. However, you may want to use part of the extended memory to emulate a RAM disk. Creating a temporary RAM disk will give you much faster access to some applications (programs which do not automatically take advantage of the increased memory). The following section explains how to create a temporary RAM disk.

Setting Up a RAM Disk

If you want to set up the GS-RAM III as a RAM Disk, run the Control Panel program from the IIGS Desk Accessories Menu (under the  menu or press control--esc). Then select the RAM Disk option.

You must first tell the computer how much of the card's memory you want to set aside for use as a RAM disk. The minimum setting limits the amount of memory that applications can use. The maximum limits how much memory the RAM disk can use. You'll want to leave enough memory open to support the programs that automatically take advantage of the extra memory.

- ❖ *Note:* If working with GS/OS or an application that uses a version of ProDOS before 1.2, the minimum and maximum RAM disk settings must be equal.

If an application needs more memory than you have allotted, a message to that effect will come up on the screen. You can adjust accordingly by selecting "RAM Disk" from the Control Panel program and decreasing the maximum RAM disk size.

Changing the Control Panel setting will not change the currently established RAM disk. You will have to turn off the power to establish a RAM Disk of a different size. The new settings will take affect upon startup.

- ❖ **Remember:** Powering down will in turn erase what is currently in the temporary RAM disk you have created. Save any data from the RAM Disk that you do not want to erase before powering down.

Addressing the GS-RAM III Disk

Some applications may ask you to identify your RAM disk by slot and drive number.

SLOT: The GS identifies your mock RAM disk in slot 5 just as it recognizes a 3.5" drive as being in slot 5.

DRIVE: The drive number will depend on what you decide to use as your startup device. Drive 1 can be either the RAM disk or a 3.5" drive. Choose one or the other using the "Slots" heading under the Control Panel Program.

- First, make sure slot 5 is set to "Smart Port."
- If you want the computer to boot your RAM disk at startup, select "RAM Disk" next to the "Startup Slot" heading. The GS will recognize the RAM disk at S5,D1 and the 3.5" drive will be S5,D2.
- If you want the computer to boot your 3.5" drive at startup, enter "5" (or "Scan") under the "Startup Slot" heading. The GS will recognize the 3.5" drive at S5,D1 and the RAM disk will be S5,D2.
- A second 3.5" drive will be S2,D1. The following chart may help you to understand:

Boot "Slot 5"	Boot "RAM Disk"
S5,D1 ---- 3.5" drive	S5,D1 ---- RAM disk
S5,D2 ---- RAM disk	S5,D2 ---- 3.5" drive
S2,D1 ---- 3.5" drive	S2,D1 ---- 3.5" drive

- ❖ **Note:** If using ProDOS® 1.1.1, your second 3.5" drive (S2,D1) will not be recognized. This early ProDOS version allows only two devices per slot. See your authorized Apple dealer to upgrade your applications which use ProDOS 1.1.1.

Using the GS-RAM III RAM Disk

Now you are ready to use the RAM disk you have created. Think of it as a regular disk. You can format it then save or copy documents or applications onto it.

- ❖ **Remember:** The RAM disk is only a disk as long as the power is on. The information it contains is lost when the power is turned off (unless you have saved that information to a disk or disks).

FORMATTING

You need to format the RAM disk only if you plan to use it as your startup device. The disk will be automatically formatted at startup for saving and copying. So, if you plan only to save to and copy to the disk, you don't need to worry about formatting. If, however, you plan to use the RAM disk as a startup device, format the disk just as you would a regular disk. Format for either ProDOS, Pascal or Applied Engineering's CP/AM (5.1.1 or later) depending upon the operating system of the application(s) you intend to store on the RAM disk. Here are a few ways to format for the different systems:

- Format for ProDOS using the "Format" option on your IIGS System disk or IIGS System Utilities. Or, you may find it easier to use the Finder's "Format Disk" option under the "Special" menu.
- Format for Apple Pascal 1.3 by X-ecuting the "Formatter" program on your Pascal disk. (Refer to Apple Pascal documentation for more information on formatting for Pascal.)
- To format for CP/AM versions 5.1.1 and following, refer to the formatting instructions in the CP/AM manual.
- ❖ **Note:** **Do not** try to format the disk for DOS 3.3. The 3.3 applications were designed for use with 5.25" disks and will not work with the IIGS RAM disk.

You can give the RAM disk any name that the operating system will allow.

COPYING

You can copy programs to the RAM disk with the "Copy Files" option on your System Utility Disk. You may prefer to use the Finder to make direct copies of ProDOS applications by dragging the application's icon to your RAM disk's icon.

SAVING

You can save documents onto the RAM disk just as you do on a regular disk. But be sure to save the contents of your RAM disk on a regular formatted disk before you turn off the power. You will most likely want to save to a regular disk *during* use to keep documents from being lost due to power surges, power loses, and other frustrating occurrences.

CHAPTER THREE

Adding More Memory

Memory Increments

Your GS-RAM III can be expanded in 1Mb increments up to 4Mb on the board. When you want to add more than 4Mb, you can attach the 2Mb "Piggyback" Expander for a total of **6Mb**. Call AE sales at (214) 241-6060 for more information about the Expander.

Where to Get Chips

Selection of the proper memory chips for your GS-RAM III can be a little tricky. There are several chip manufacturers and many different types and specifications of RAM chips available.

You may be able to find memory chips with the proper specifications at some computer or electronics-parts stores. But we recommend that you purchase them from Applied Engineering. Applied Engineering receives bulk-quantity discounts on purchases of memory chips and can often offer them for less. Applied Engineering uses only the highest-quality memory chips. When you get ready for more memory, give Applied Engineering a call. You'll be assured of getting the right chips at the right price.

Chip Choices

Your GS-RAM III can contain up to 4 Mb using 1 Mb x 4 (1 megabyte by four) ZIP DRAM chips. You need to use 120 nanosecond (-12) chips or faster. Memory on the card is organized into four blocks, labeled on the card. Each block consists of two memory chips. You must add these chips in groups of two, filling the blocks in order, 1Mb thru 4Mb.

Installing the Chips


There is nothing complicated about installing RAM chips onto the memory expansion cards. Just follow these basic guidelines:

Fill the memory blocks in numerical order. Refer to the illustrations below.

- 1) **Remove the card from your computer if it is currently installed.**

❖ **Warning!** Static electricity can ruin chips. Touch the power supply before handling the board or the chips.

- 2) **Position the chip so that the notch (or dot, on some chips) points UP, away from the gold edge-connector on the bottom of the card.**

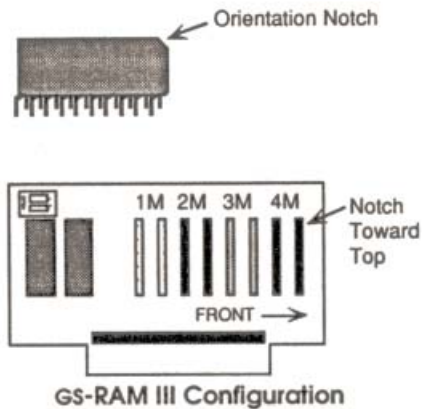

❖ **Warning:** If you install a chip upside down it could possibly damage the chip. Be sure to double check the orientation dot.

- 3) **Align each leg (pin) of the chip with its socket hole.**

You may have to bend the pins slightly to align them with the holes. Do this by holding the chip on edge so that one of the rows of feet are against the table's surface. Now apply downward pressure to the chip while rolling it toward the bottom of the pins. This will bend the pins uniformly.

- 4) **Press down firmly on each chip.**



This ensures that it is fully seated in its socket. Check closely for bent pins.

- 5) **Set the Switches.**

You must have the switches in the proper position in order for the correct amount of memory to be used. Your board may use either Flip Switches or Rocker Switches. Refer to the drawing below for proper settings.

Memory	Switch 1	Switch 2
1 Megabyte	Off	Off
2 Megabytes	On	Off
3 Megabytes	Off	On
4 Megabytes	On	On

Flip Switches



Rocker Switches

Set the Switches

- 6) **Reinstall the card then test it using the appropriate test.**

❖ **Warning:** Make sure that the end marked "FRONT" on the card is toward the front of the computer.

The memory test is included on the AW 3 Expander disk. The test will give a graphic representation of the card and indicate which chips are missing, bad or improperly installed.

APPENDIX

Getting Help

If you have a technical question relating to your GS-RAM III card or any other AE product that is not covered in the manual, please contact the dealer from whom you purchased the product. If you are experiencing difficulties with a particular program, contact the program's author or publisher.

In the event that the dealer or the publisher's support personnel cannot answer your question, call AE Technical Support. The support representatives are experienced in the applications and uses of Applied Engineering products, but in order to provide a quick and effective answer to your question, they will need to know as much as possible about the hardware and software specifically related to your question. Please provide the technical support representative with the following information:

- ◊ The Applied Engineering product related to your question and its revision number.
- ◊ The original and current memory configuration of the card (if applicable).
- ◊ The model and revision of your computer.
- ◊ What peripherals are being used and what cards are in each slot.
- ◊ The name, version, and revision level of the software with which you are experiencing problems.
- ◊ The results of any test programs, diagnostics, or troubleshooting done by you, your dealer, or your software publisher's support department.

**Applied Engineering
Technical Support
1-900-369-2323**

9 AM to 12:30 PM & 1:35 PM to 5 PM(CST) Monday - Friday
(Your call to Technical Support will be billed to your phone.

Please call only the number above for technical support. Our sales office cannot transfer calls to the support lines.)

**Bulletin Board System
(214) 241-6677**

24 hours, 7 days a week

300/1200/2400 Baud, 8 Bit, No Parity, Full Duplex, MNP-5

NOTES

Returning a Product

RMA Number , Return Form, and Invoice

If your product needs to be returned, the technical support representative will give you a Return Material Authorization (RMA) number.

- ☐ Record the RMA number for your own records.
- ☐ Write the RMA number on your package label.
- ☐ Fill out the Return Form on back of the notice marked "Attention!" A complete form will greatly reduce the time it takes to return your package.
- ☐ Attach a copy of your original invoice to the form.
- ❖ **Warning:** If you don't include an invoice, products will be treated as out of warranty products and will be returned to you C.O.D. for the amount of the service charge.

When You Ship

If you don't have the original packing material, wrap the board in anti-static material (preferably the anti-static bag in which the card was originally shipped; however, aluminum foil will work fine). Pack it in a sturdy box cushioned with wadded papers (i.e. used computer paper or newspaper).

- ❖ **Warning:** If your product is damaged due to inadequate packing, your warranty will be void.

Include the return form and invoice.

Send the package, shipping prepaid, to:

**RMA# __?__
Applied Engineering
Technical Support
3210 Belt Line Road, Suite 154
Dallas TX 75234**

You should insure your package. AE will not assume any responsibility for inadequate packing or loss or damage during shipping.

When We Receive

Our service department will use your completed form in an attempt to duplicate the problem.

If it is determined that your product is defective due to a manufacturing defect, your card will be repaired or replaced at Æ's option.

Any misuse, abuse, or non-Æ authorized alteration, modification, and/or repair to the Applied Engineering product will void the warranty. This warranty will also be void if you use the Æ product for any purpose other than its intended use.

Your product will be fully tested before it is shipped back to you, transportation prepaid, via UPS regular delivery.